



Open System Introduction

PLS SERIES

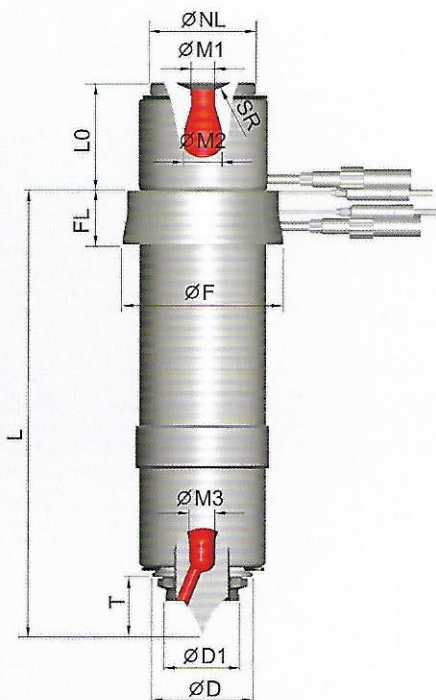


How to read Nozzle Model

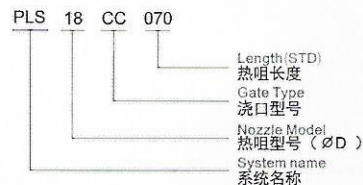

How to read Thermocouple Code



How to read Heater Code

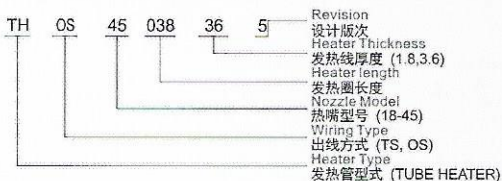

Division	PLS 18	PLS 25	PLS 35	PLS 45
Model Number	PLS -18-□□-□□□	PLS -25-□□-□□□	PLS -35-□□-□□□	PLS -45-□□-□□□
Injection Volume	UP to 250gr	UP to 650gr	UP to 1400gr	Over 1900gr
SR	21	21	21	21
Ø M1	4	6	8	8
Ø M2	8	10	12	16
Ø M3	5	7	9	13
L0	40	40	45	45
L CC,CE,CH,CW,CL,OL	60~180	65~485	75~555	85~505
SL	55~175	55~475	60~540	65~485
Ø NL	25	35	45	45
Ø D	18.15	25.15	35.15	45.15
Ø D1	13	18	26	34
FL	20	20	23	25
T	11	16	21	26
Ø F	38	48	58	68
Tube Heater	TH OS 18□□□6 36 5	TH OS 25□□□4 36 5	TH OS 35□□□5 36 5	TH OS 45□□□8 36 5
Thermocouple	NZ TP□□ 16□□ 5 R	NZ TP□□ 16□□ 5 2	NZ TP□□ 16□□ 5 2	NZ TP□□ 16□□ 5 2